

EX11CT (RHFE-265FTA2)

Type of Appliance Direct vent wall furnace suitable for homes, apartments, and

condominiums, residential or commercial setting; modular/mobile home

approved; forced combustion, forced convection

Rinnai Model Number RHFE-265FTA2-N (Natural gas) RHFE-265FTA2-P (Propane)

 Gas Rate Input (BTU/hour)
 Low - 5,500
 Low - 5,700

 High - 11,000
 High - 11,000

Gas Rate Output (BTU/hour) Low - 4,400 Low - 4,560

High - 8,800 High - 8,800

AFUE Rating 81%

Minimum Gas Supply Pressure 3.5 in (89 mm) W.C. 8 in (203 mm) W.C.

Maximum Gas Supply Pressure 10.5 in (267 mm) W.C 13 in (330 mm) W.C.

Electrical Connection AC 120V, 60 Hz, 44 watts

Gas Connection 1/2 inch NPT

Combustion System Stainless steel Bunsen burners

Ignition System Electronic spark ignition

Fan CFM Output Low - 96.4 High - 128.5

Temperature Settings Low (LO): minimum combustion

60° - 80° F in 2° increments High (HI): maximum combustion

Temperature Control • Electronic thermostat

• Temperature limiting program to comply with Inside Design

Temperature limits

Humidifier Tray Enameled tray with capacity of 1.5 pints (700 cc)

Weight Approximately 46 lbs (21 kg)

Clearance from Combustibles | Side: 2 inches (50 mm), Top: 0 inches (0 mm), Front: 40 inches (1 m)

Noise Level 31 - 38 dB(A)

Warm Air Outlet Bottom front louvers

FEATURES

Restart capability	Restarts automatically when ignition or combustion fails.	
Timer Settings	Starts and turns off the heater at 2 timer settings.	
Seven-stage modulating gas valve	Provides precise gas flow by operating from one to seven stages.	
Negative coefficient thermistor	Detects temperature change in 1/2 of a degree.	
Variable speed inducer motor with pressure switch	Monitors and controls combustion fan and allows the appliance to overcome winds of up to 40 mph.	
Self diagnostic electronics	Continually monitors functions; provides auto shutdown codes; indicates	
Quiet operation	Reduces noise through use of swept blades in convection fan; quiet expansion / contraction of parts due to temperature changes.	
Wall Thermostat connectable	stat connectable Ability to connect to a field supplied wall thermostat.	







Rinnai.

EX11CT (RHFE-265FTA2)

Safety Devices

- Flame rod detects flame failure; results in auto shutdown to prevent escape of gas
- Bi-metal switch, thermal fuse, and thermistor detect overheat condition; results in auto shutdown
- 3 amp fuse protects against power surge; results in auto shutdown
- Abnormal spark at time of ignition results in auto shutdown
- Combustion fan purges any gas from the combustion chamber before ignition
- Convection fan continues to run after burner shutdown to cool internal parts
- Child lock prevents inadvertent operation
- Appliance shuts down if room reaches 104° F (40° C)

Concentric; 3 1/8 inch (80 mm) wall hole

13 feet (4 m) with a maximum of 2 bends;

maximum 8 ft (2.4 m) vertically for altitudes at or below 2000 ft (610 m) maximum 5 ft (1.5 m) vertically for altitudes above 200 ft (610 m)

Venting

Maximum Vent Length

Wall Thickness and Flue Manifold Kits (the "A" vent kit is included with the appliance)


Name	Kit No.	Fits Walls
S Vent Kit	FOT-150	3 - 4 1/2 in (75 - 115 mm)
A Vent Kit	FOT-151	4 1/2 - 9 1/2 in (115 - 240 mm)
B Vent Kit	FOT-152	9 1/2 - 15 3/4 in (240 - 400mm)
C Vent Kit	FOT-153	15 3/4 - 23 5/8 in (400 - 600 mm)
D Vent Kit	FOT-154	23 5/8 - 31 1/2 in (600 - 800 mm)

Warranty

Conversion Kit


Labor: 2 years; Parts: 5 years; Heat Exchanger: 10 years

Rinnai is continually updating and improving products; therefore, specifications are subject to change without prior notice. Local, state, provincial and federal codes must be adhered to prior to installation.

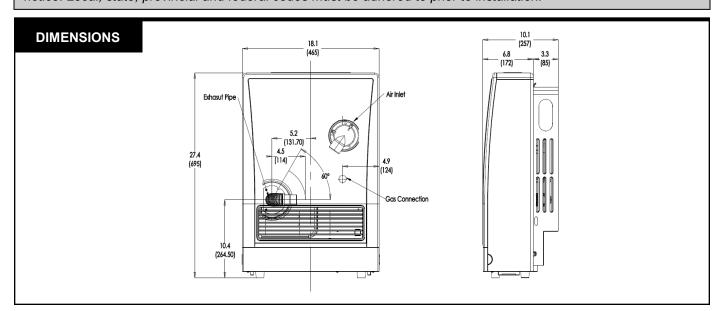


Rinnai.

EX11CT (RHFE-265FTA2)

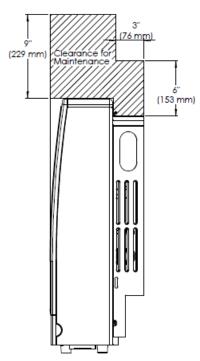



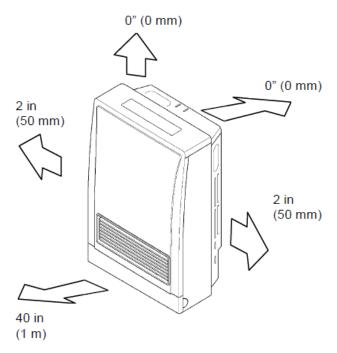


Clearance to Combustibles



EX11CT (RHFE-265FTA2)

International Energy Conservation Code (IECC) Climate Regions

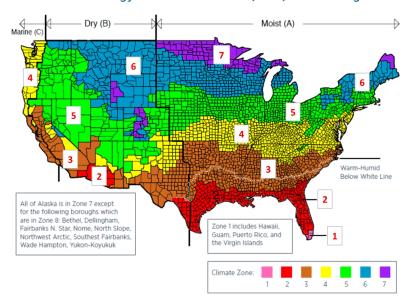

Zone	Cubic Feet	Square Feet*
1	5,471 -7,430	681 -930
2	3,551 - 4,820	441 - 600
3	2,981 - 4,050	371 - 510
4	2,521 - 3,430	321 - 430
5	2,081 - 2,830	261 - 350
6	1,701 - 2,310	211 - 290
7	1,551 - 2,110	191 - 260

- Selection is based on installation locations at 2000ft or below. If the installation is above 2000ft please contact Rinnai.
- In bathrooms, select a product equal to or less than 6000BTUH.
- In bedrooms, select a product equal to or less than 10000BTUH.
- In single rooms in Region V, multiply the room's volume by 3.20. The result is the maximum heat input (BTUH) of the product you should consider.
- Chart should not be used as the sole document for making final product selection. Consult with your Rinnai independent dealer.
- Square footage column based off of an 8ft ceiling assumption.
- The guidelines apply to average house construction.
- This is intended to be used as a guide and not a replacement for a professionally engineered project.
- Rinnai has not been to the location so this guidance is for your assistance only and should not be the sole factor in making a sizing selection.
- Sizing does not describe a complete system.
- The contractor/engineer must determine the necessary components for and configuration of the particular system being installed.
- Sizing does not imply compliance with local building codes.
- It is the responsibility of the engineer/contractor to ensure the installation is in accordance with all local building codes.
- Confer with local building officials before installation.
- RAC, its agents, employees, directors, officers, parent or affiliate companies assume no liability for damages arising from information provided herein to or by consumers or third parties or for damages arising from or associated with water quality, compliance with local codes, installation methods, materials or other circumstances related to application or installation.
- For primary heat applications, perform a Manual J sizing calculation.
- Chart is to be used for supplemental heat applications only.